


1792 N. 42nd Street, Springfield, OR 97477 Toll free 1-877-435-8377 sales@creativeshelters.com

Setup Instructions for Frame Fitting with Tarp Canopy

Setting up your new Canopy is quick and Easy!

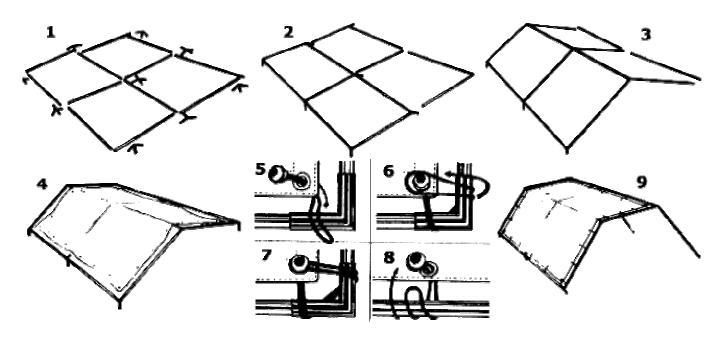

- A. Place all roof pipes on the ground next to corresponding fittings as shown in illustration 1.
- B. Connect all roof pipes and fittings as shown in illustrations 2 and 3.
- C. Drape tarp over assembled roof frame, fastening corners onto the frame first using ball ties as shown in illustrations 5, 6, 7.
- D. Once corners are fastened, place the ball ties through the grommet holes and loop around the pipe as shown in illustration 8.
- E. Lift one side of the roof and insert leg poles into the fittings. Lift the opposite side of the roof and insert remaining leg poles.
- F. To improve canopy stability slant the legs of the canopy slightly outward equally on each side so that the gable end opening is 6 to 12 inches wider at the bottom where the legs touch the ground.

All canopy shelters should be considered temporary structures and are not designed to withstand acts of nature such as heavy wind and snow. Remove tarp when heavy winds or snow are expected. Anchoring of canopies is strongly recommended. Failure to anchor is unsafe and can lead to property damage. Methods of securing will vary depending on where the canopy is located. Foot pads are designed to be bolted down to wood or concrete surfaces and duck cable anchors or auger anchors are excellent for ground installations.